

PRO-KLEEN
SpotBlitz 
PKSC-K15



www.prokleen.co.uk



General information

Please read the entire instruction manual before using the product and then save it for future reference. We reserve the right for any errors in text or images and any necessary changes made to technical data. If you have any questions concerning technical problems please contact our **Customer Services on 0800 091 3171.**

Contents

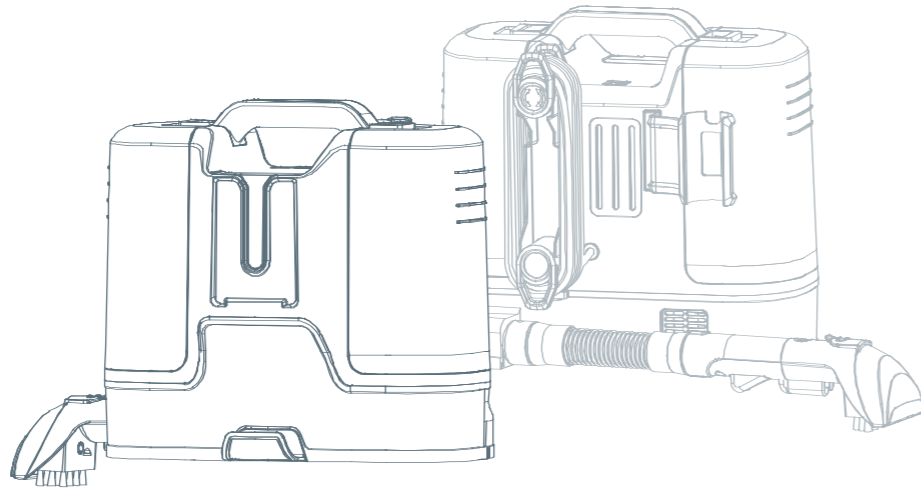 
Introduction	4
SpotBlitz parts list	5
Safety instructions.....	6
Technical specification	7
Installation procedure.....	8
How to fill the water/detergent tank.....	9
Pre-cleaning setup	10
Cleaning upholstery or carpets.....	11
Other cleaning attachments	12
Cleaning and maintenance steps.....	14

Introducing the Pro-Kleen SpotBlitz

The **Pro-kleen SpotBlitz** effectively and effortlessly removes spills and stains, helped with its powerful deep suction design and carefully designed hygienic selection of deep cleaning tools. Used alongside **Pro-Kleen's** unique specifically formulated cleaning solutions you can be sure to target everyday stains and spills quickly and effectively.

This is surely an every day tool with its thoughtfully user friendly lightweight design and handy tool storage facilities you can be sure this handy **SpotBlitz** will keep your carpets and upholstery smelling fresh and looking new for years to come.

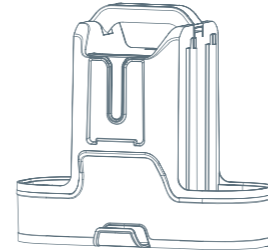
For **SpotBlitz** approved Pro-Kleen detergents and cleaning products scan the QR code below:



SpotBlitz parts list



Water/
Detergent
Tank



Machine



Dirty
Water
Tank



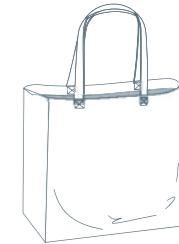
Quick Release/
Tidy Power
Cable Wrap



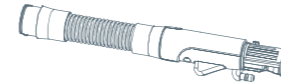
Tool Storage
Holder



Flex Hose
Clip



Tool Storage
Bag



Hose and Tool
Connector



Standard
Cleaning Brush



Self Cleaning
Connector

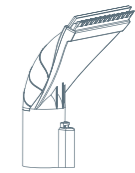
OPTIONAL TOOLS



Crevice
Cleaning Adaptor



Deep Stain
Cleaning Brush



Glass / Wall Tile
Cleaning Adaptor

Safety instructions

- Unplug from electrical socket when not in use and before cleaning, maintaining or servicing the appliance.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Cleaning and user maintenance shall not be made by children without supervision.

Children should be supervised to ensure that they do not play with the appliance. This is not a toy.

- If the power cable is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts of the appliance and its accessories.
- Use only the type and amount of liquids specified under the Operations section of this guide.
- Do not leave the appliance when plugged in.
- Always connect to a properly earthed electrical socket.
- Do not allow to be used as a toy.

- Do not expose to rain, never use outdoors. Store indoors in a safe place away from children and pets.
- Use only as described in the user guide.
- Use only manufacturer's recommended attachments supplied with this appliance.
- Do not use the appliance if the power cable or plug is damaged.
- Do not immerse in water or liquid.
- If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water; do not attempt to operate it and have it repaired at an authorised service centre.
- Liquid or steam must not be directed towards equipment containing electrical components.
- Never handle the plug or appliance with wet hands.
- Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow. Check and clean after each use and before each use.
- Keep the power cable away from heated surfaces or heated appliances.
- Do not unplug by pulling on the power cable. To unplug, grasp the plug, not the power cable.

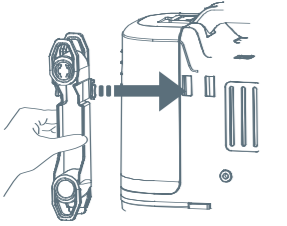
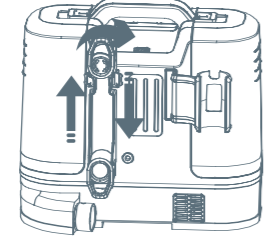
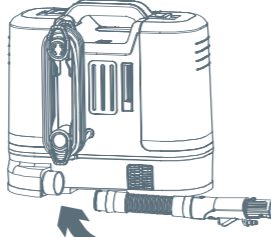
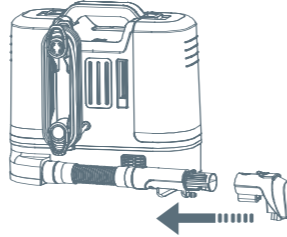
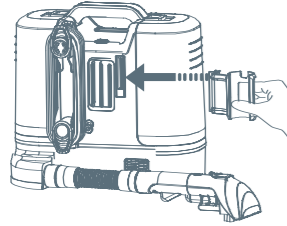
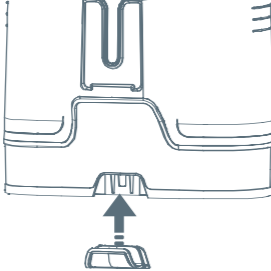
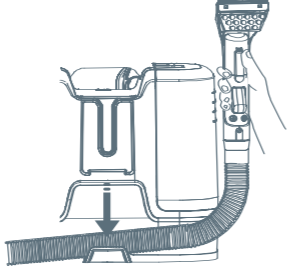
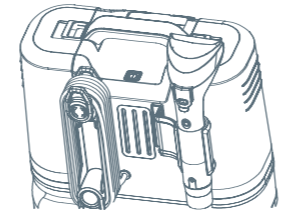
- Do not put any foreign object into any openings in this appliance.
- Do not pull or carry by the power cable, never use the power cable as a handle, never close the door on the power cable, or pull the power cable around sharp edges or corners.
- Turn off all controls before unplugging.
- Use extra care when cleaning on stairs.
- Do not clean up toxic material (chlorine bleach, ammonia, drain cleaner, etc.)
- Do not clean up hard or sharp objects such as glass, nails, screws, coins, etc.
- Do not use this appliance to clean up flammable or combustible liquids, such as petrol, or use in areas where they may be present.
- Do not use appliance in an enclosed space filled with vapours given off by oil base paint, some moth-proofing substances, flammable dust, or other explosive or toxic vapours.
- Keep appliance on a level surface.
- If your appliance is fitted with a non-reworkable BS 1363 plug it must not be used unless a 13 amp (ASTA approved to BS 1362) fuse is fitted in the carrier contained in the plug.

Technical specification

Motor Wattage	450W
Voltage	220-240V
	50-60Hz
Power Cable Length	5m
Suction	13Kpa
Noise Level	78db
Clean tank water capacity	1800ml
Waste water tank capacity	600ml
Extension water hose	1.2m



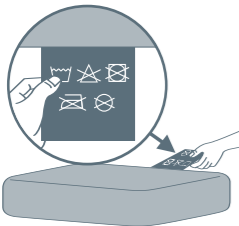
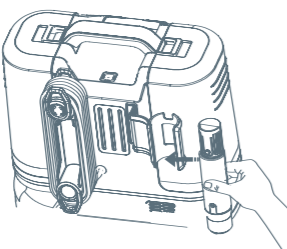
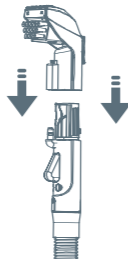
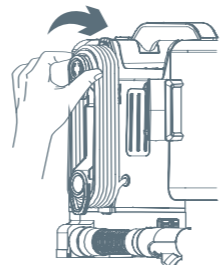
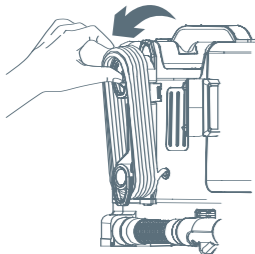

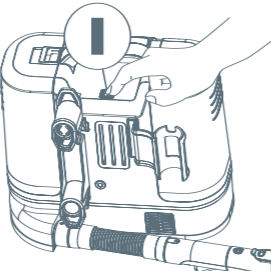
Installation procedure

 <p>Attach the quick release/tydy power cable wrap by snapping into the slot on the back left side of the machine</p> <p>1</p>	 <p>Wrap the power cable around the quick release/tydy cable wrap</p> <p>2</p>	 <p>Connect the hose and tool connector</p> <p>3</p>	 <p>Connect the standard cleaning brush tool to the hose tool connector</p> <p>4</p>
 <p>Click the tool storage holder into the slot on the back right side of the machine.</p> <p>5</p>	 <p>Click the flex hose clip into the slot at the bottom / front of the machine. You should hear a 'click' when locked in.</p> <p>6</p>	 <p>Wrap the flex hose around the machine and click the hose tool connector into the bracket.</p> <p>7</p>	 <p>Your unit is now set up correctly for use and storage. All additional tools store in the bag provided.</p> <p>8</p>

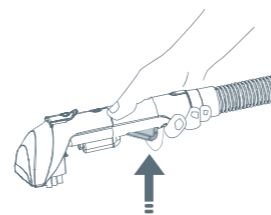
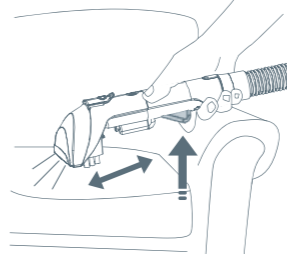
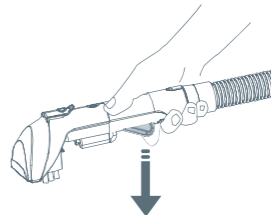
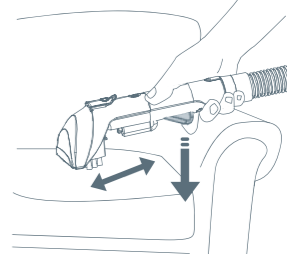
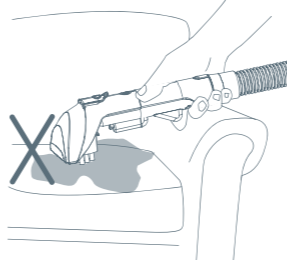
How to fill the water/detergent tank

 <p>Remove the water/detergent tank vertically by sliding the release catch at the top of the tank.</p> <p>1</p>	 <p>Twist the clean water tank cap to remove</p> <p>2</p>	 <p>Add clean water to the water tank.</p> <p>3</p>	 <p>Add the correct amount of cleaning detergent to the water tank.</p> <p>4</p>
 <p>Securely and firmly tighten the water tank cap back into position.</p> <p>5</p>	 <p>Place the water tank securely back into position on the machine.</p> <p>6</p>		

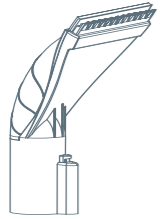
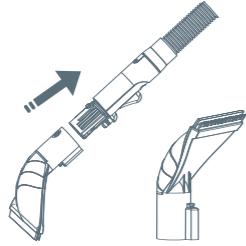
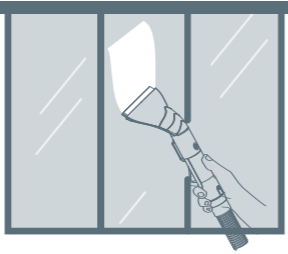
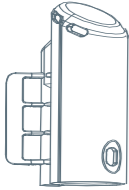
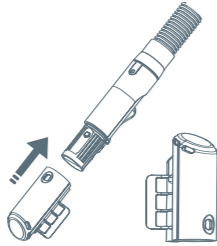
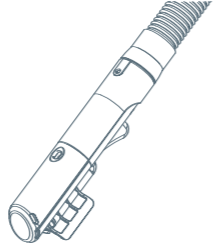
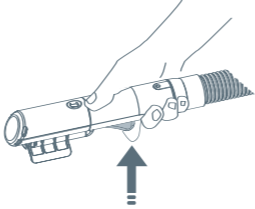
Pre-cleaning setup

 <p>Before attempting to clean, please check the washing care label to ensure the item is suitable for spot/wet cleaning.</p> <p>1</p>	 <p>Remove the hose and tool connector from the tool storage holder.</p> <p>2</p>	 <p>Connect the standard cleaning brush attachment to the tool connector.</p> <p>3</p>	 <p>Twist the quick release cable switch on the quick release/ tidy cable wrap</p> <p>4</p>
 <p>Remove the power cable.</p> <p>5</p>	 <p>Plug into the electrical outlet.</p> <p>6</p>	 <p>Switch on the unit. Your unit is now ready to clean.</p> <p>7</p>	


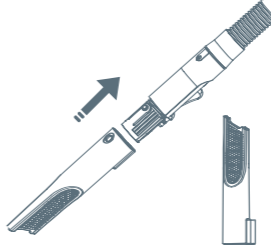
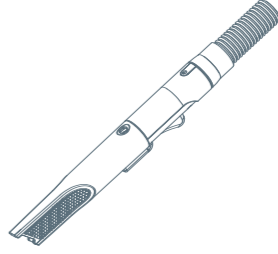

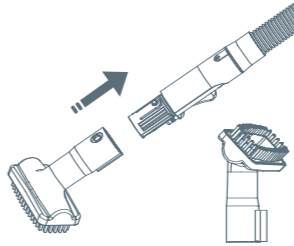
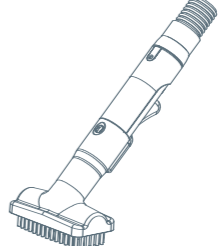
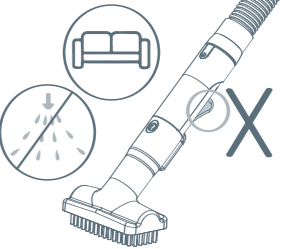
Cleaning upholstery or carpets

 <p>To operate press the spray trigger on the hose and tool connector.</p> <p>1</p>	 <p>Point the standard cleaning brush over the spot or stain. Press the spray trigger slowly to apply the cleaning detergent.</p> <p>2</p>	 <p>Release the spray trigger when an even amount of cleaning detergent has been applied.</p> <p>3</p>	 <p>With the spray trigger released, slowly brush backwards over the spot or stain using the standard cleaning brush.</p> <p>4</p>
 <p>Don't over soak the spot or stain. Only mix and use the correct amount of cleaning detergent formula recommended.</p> <p>5</p>			

Other cleaning attachments: Cleaning Windows / Shower Screens / Wall Tiles
(please use the correct detergent or plain water for the task in hand)

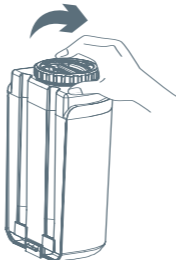
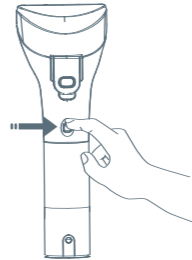
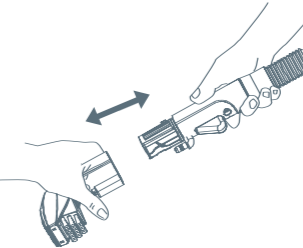
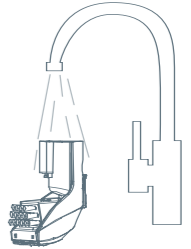

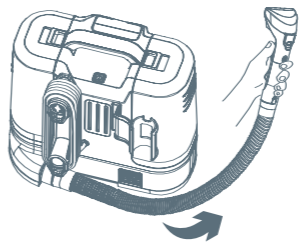
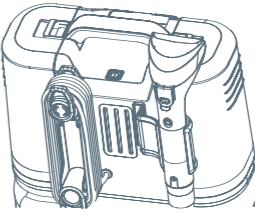
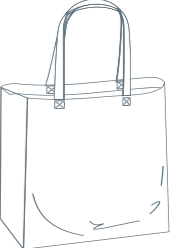
<p>GLASS / WALL CLEANING</p>  <p>Select the Glass / Wall Tile Cleaning Adaptor</p> <p>1</p>	 <p>Connect the glass / tile cleaning adaptor to the hose and tool connector.</p> <p>2</p>	 <p>Press the trigger to spray the solution onto glass/tiles, release the trigger, slowly moving backwards to clean the item.</p> <p>3</p>	
<p>SELF CLEANING</p>  <p>Select the Self Cleaning Connector</p> <p>1</p>	 <p>To 'self clean' the machine, attach the self cleaning adaptor to the hose and tool connector.</p> <p>2</p>	 <p>Fill the water/solution tank with clean water and switch on the machine.</p> <p>3</p>	 <p>Squeeze the trigger on the hose adaptor tool for 30 seconds. This will 'self clean' the machine ready for next use.</p> <p>4</p>

Vacuum attachments *Important if using the following two vacuum attachments please make sure the water tank is empty and dry. Also after each use follow the self cleaning section shown on points 1 - 4 (page 12) to keep your unit in perfect working clean order.*

<p>CREVICE CLEANING</p>  <p>Select the Crevice Cleaning Adaptor</p> <p>1</p>	 <p>Connect the crevice cleaning adaptor to the hose and tool connector.</p> <p>2</p>	 <p>Use this attachment to vacuum and clean those hard to reach places around the home and vehicle.</p> <p>3</p>	
<p>DEEP STAIN CLEANING</p>  <p>Select the Deep Stain Cleaning Brush</p> <p>1</p>	 <p>Connect the deep stain cleaning brush to the hose and tool connector.</p> <p>2</p>	 <p>Place the deep stain cleaning brush on tough stains moving backwards and forwards to irritate and loosen the stain.</p> <p>3</p>	 <p>Do not use detergents or water when using this attachment. This is only for vacuuming and loosening tough stains.</p> <p>4</p>

Cleaning and maintenance

 <p>Unplug from the the unit from the power outlet</p> <p>1</p>	 <p>Remove the dirty water tank vertically by sliding tank release catch on top of the tank</p> <p>2</p>	 <p>Twist the dirty water tank cap to remove.</p> <p>3</p>	 <p>Remove the dirty water float bracket from inside the tank.</p> <p>4</p>
 <p>Pour out dirty water from the tank and rinse with clean water.</p> <p>5</p>	 <p>Rinse dirty water float bracket until clean</p> <p>6</p>	 <p>All of the dirty water float bracket is washable</p> <p>7</p>	 <p>Insert the dirty water float bracket back into the tank when dry.</p> <p>8</p>

 <p>Securely firmly tighten the dirty water tank cap back into position and fit back to the machine.</p> <p>9</p>	 <p>Disconnect the cleaning tool by pushing down firmly on the button on the hose and tool connector.</p> <p>10</p>	 <p>Pull the cleaning tool away from the hose and tool connector.</p> <p>11</p>	 <p>Rinse the cleaning tool under clean water until clean.</p> <p>12</p>
 <p>Leave to dry.</p> <p>13</p>	 <p>Attach the cleaning tool back to the hose and tool connector and wrap the hose around the machine.</p> <p>14</p>	 <p>Click the cleaning tool into the tool storage holder, wrap the power cable around the quick release power cable wrap.</p> <p>15</p>	 <p>Place any additional tools in the storage bag provided. The machine is ready for next use.</p> <p>16</p>



SERVICE WARRANTY

Hygiene Supplies Direct guarantees the product free from defects in materials and workmanship for a period of 1 year from date of purchase.

Should this unit be operated under conditions other than those recommended, at voltages other than the voltage indicated on the unit, or any attempts made to service or modify the unit, then the warranty will be rendered void. The product you buy may sometimes differ slightly from illustrations. This warranty is in addition to, and does not affect, your statutory rights.

If you have any problems with this product, please call our **Help Desk** on **0800 091 3171** or email sales@hygienesuppliesdirect.com



Important

The importer retains his right to make changes in appearance and completeness of the item without preliminary notification to the customer. The item is for household use only.

The manufacturer does not assume any liability for any damage caused directly or indirectly by not following this instruction manual, general safety rules, or interference in the construction of the product.



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

For **SpotBlitz** approved Pro-Kleen detergents and cleaning products scan the QR code:



Hygiene Supplies Direct Ltd, Castleford, England WF10 1PA declares that the SpotBlitz Spot Cleaner is exclusively manufactured and imported for Pro-kleen.

www.prokleen.co.uk

